

EASY TO USE INSTRUCTIONS

Dryer MUST NOT be connected to an electrical source when using dry air.

Step 1:

Connect shop air line to the inlet connection on the pre-filter.



Step 2:

Connect the Tsunami Ultra-flo Spray Hose to the outlet regulator.

Now use the dry air.

Note: You have approximately 20 minutes of spray time before you MUST regenerate the molecular sieve tower.

Step 3:

Slowly open inlet ball valve, allowing the pressure to build in the dryer.


TOWER REGENERATION INSTRUCTIONS

Dryer MUST be regenerated approximately every 20 minutes of use.

Step 1:

- Simply plug the dryer control into a 110v electrical outlet and allow to cycle 3-4 times.
- Slowly open the ball valve on the pre-filter to drain trapped condensation and oils, then close again.

Note: Unplug the dryer control before using the dryer again.

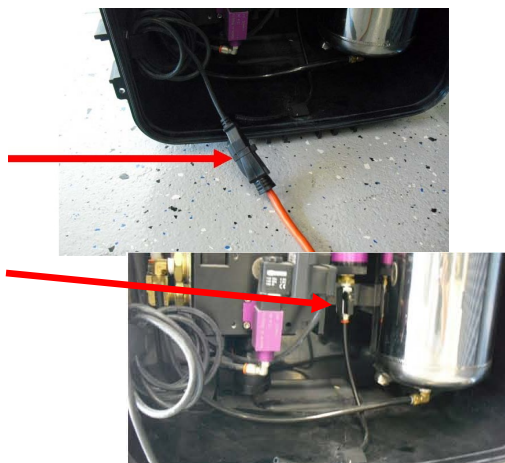

DRYER SHUT DOWN PROCEDURE

Step 1:

Plug the dryer control into a 110v electrical outlet and allow to cycle 3-4 times.



Step 2:

Slowly open the ball valve on the pre-filter to drain trapped condensation and oils.



Step 3:

Unplug the dryer and close the inlet air ball valve.



Step 4:

Disconnect the inlet air hose, slowly open ball valve to release pressure in the dryer then close ball valve.



Step 5:

Disconnect the Tsunami Ultra-flo Spray Hose, coil it up, and then pack into the portable case.

